

Service Bulletin

Subject: FreshBlender Door Adjustment

SCOPE: ALL MULTIPLEX FreshBlender MACHINES

Symptom


FreshBlender top door will not close or will not close without force.

Action

FreshBlender top door latch will not slide under the top door catch or will slide with extreme difficulty. Catch adjustment or adding a door shim will solve issue.





Top Door Catch

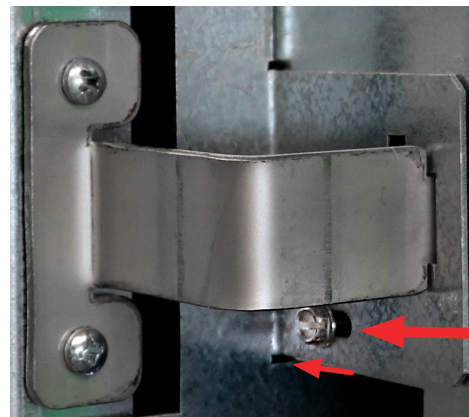

Catch Slot

1. Make sure the slot on the catch is all the way forward.

**Shim
WBL-92-122**

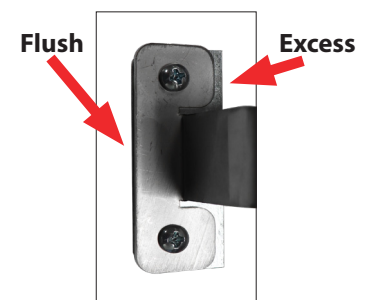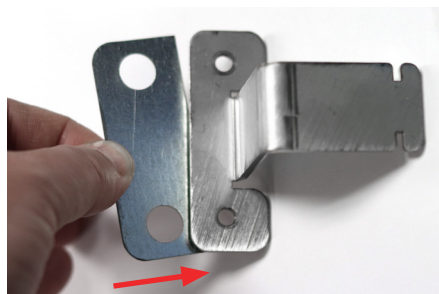

2. If difficulty persists, installing one or two shims (part number WBL-92-122) under the top door catch will resolve the issue.
 - A. Remove screws from top door catch.
 - B. Slide one or two shims under top door catch.
 - C. Re-install screws in top door catch and shims. Ensure shims line up left of catch to prevent overhang.

FURTHER ACTIONS

Contact Welbilt KitchenCare if you have any questions or concerns: 1-844-724-CARE (2273).