

Instruction Sheet

Subject: FreshBlender Physical Keyboard

SCOPE: ALL MULTIPLEX FreshBlenders

TOOLS REQUIRED

- Keyboard with integrated mouse pad and must have a Windows key. (See Figure 1) The Logitech™ K400 shown is ideal for this application.

Instruction

1. Unlock front of machine and open. (See Figure 2)
2. Locate USB port. (See Figure 3)
3. Remove plastic USB plug and set aside. (See Figure 4)
4. Connect keyboard USB to machine USB port.
5. Make sure keyboard has batteries installed correctly and is turned on.
6. Test keyboard by using pressing the Windows key.

NOTE: Remember to replace plastic USB plug when complete.



FIGURE 1 - Keyboard with Mouse Pad and Windows Key



FIGURE 2 - Unlock and Open



FIGURE 3 - Locate USB Port

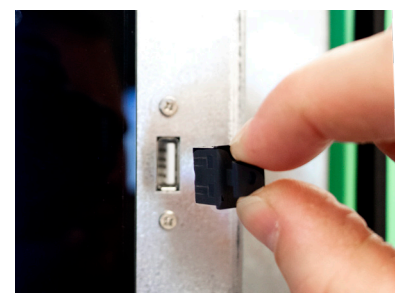


FIGURE 4 - Remove USB Plug